Casa Adriana ALARM SYSTEM INSTRUCTIONS

Your Alarm Security Code is: (<u>Will be provided upon check-in</u>). The Alarm panel is located in the kitchen across from the refrigerator.

(Ask Housekeeper or Victor for assistance if needed)

Security Codes

- You are assigned a 4-digit security code above.
- Use your security code when arming and disarming the system.

Burglary Protection

• Several modes of burglary protection: Stay, Away, Instant, Maximum.

AWAY Key #2: arms perimeter and all interior zones, entry delay is on

STAY Key #3: arms perimeter zones only and entry delay is on

MAXIMUM #4: same as AWAY, except entry delay is off

INSTANT Key #7: same as STAY, except entry delay is off

• You can BYPASS selected zones while leaving the rest of the system armed.

Arming, Step-Arming Burglary Protection

- The system must be armed before the burglary protection can sense intrusions.
- To arm your system, enter your 4-digit user code followed by the desired arming key above. (2,3,4 or 7)

Disarming Burglary Protection

• To disarm the system, enter your 4-digit user code then press the #1 [OFF] key.

**If for any reason you accidentally set off the alarm, you will receive a call from the alarm monitoring company asking if everything is okay. Provide them with your last name of your reservation and the homeowner's last name (Bickerstaff) to cancel the call.